


**Hauling shaft - components and fitting** (design modified and page revised 9.12.09)

**Components** (as delivered)

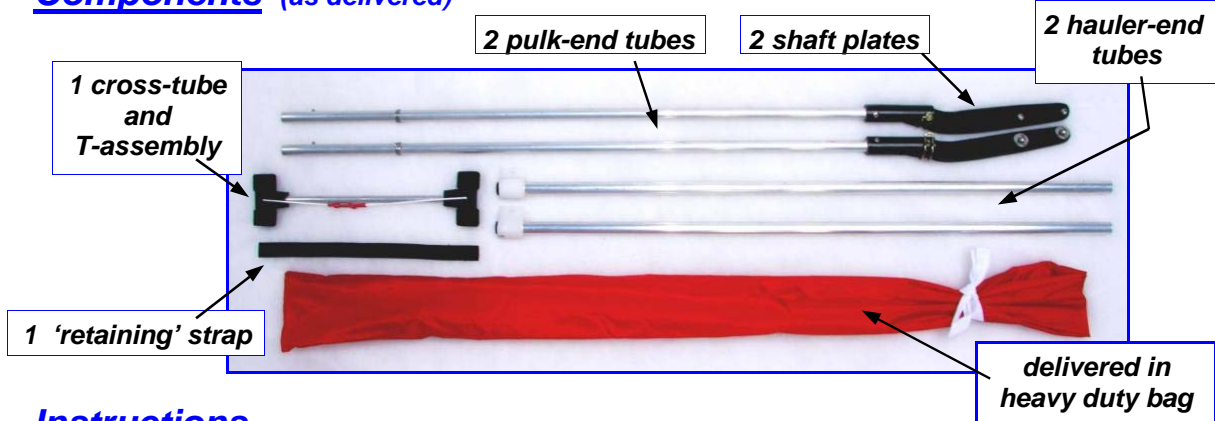


**Instructions**

1. Bolt on the 2 shaft plates with bolt heads and washers on the inside, nuts and washers on the outside.



The shaft plates and tubes are **left** and **right-handed** (when looking at the pulk from the **front**), and marked with **L** and **R**.


2. When fitted, they will look like this.

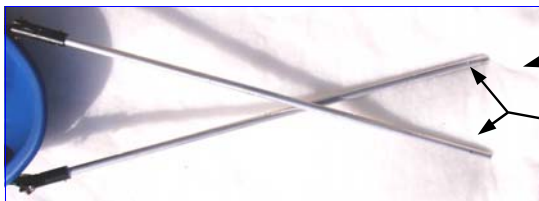



**This is normal at this stage!**

The button clips will point upwards when the plates are fitted correctly.

3. Slide the black retaining strap over the button clips and down towards the front of the pulk.

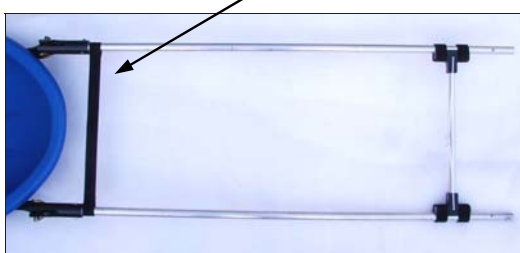

4. Position the cross-tube immediately in front of the circular clamps, and tightly wrap the Velcro 'One Wrap' around the pulk-end tubes. Regularly check that this Velcro is tight.

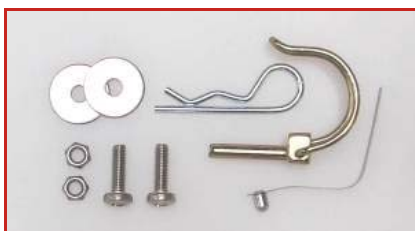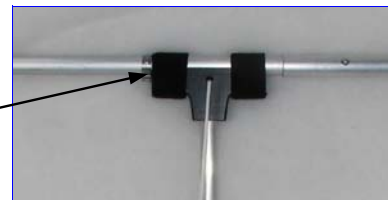

**Small items spares kit available**

5. Slide the hauler-end tubes (also left and right handed) over the pulk-end tubes until the button clips engage. When correctly fitted, the hauling blocks will face upwards with their faces inwards.

